



The optocoupler is part number 6n137. The output of the not gate goes to the FPGA to trigger. A 100 nF capacitor goes between pins 1 and 8 of the optocoupler.